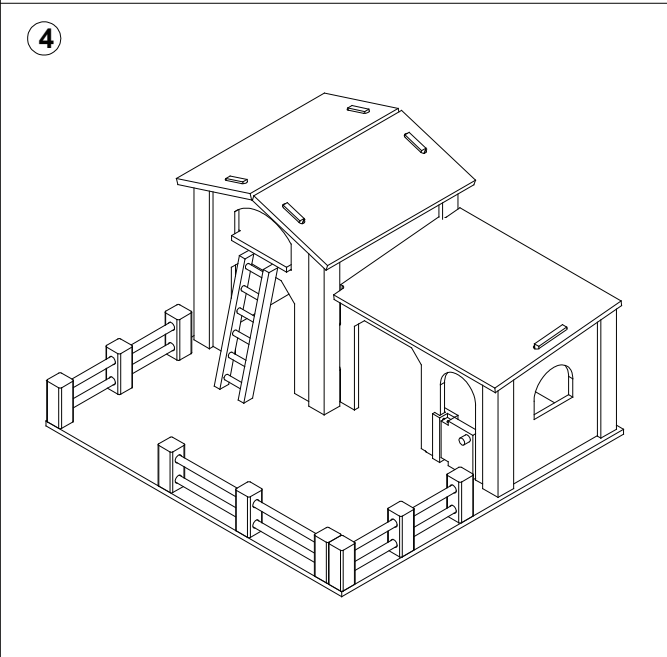 
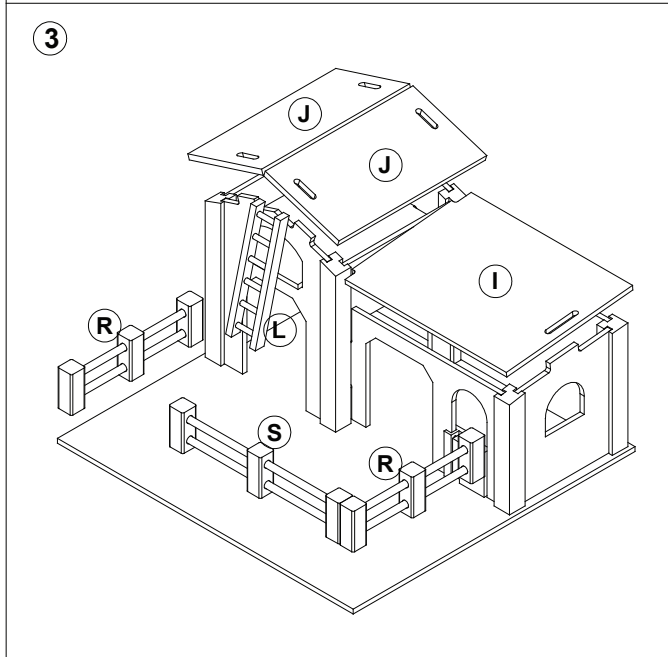 
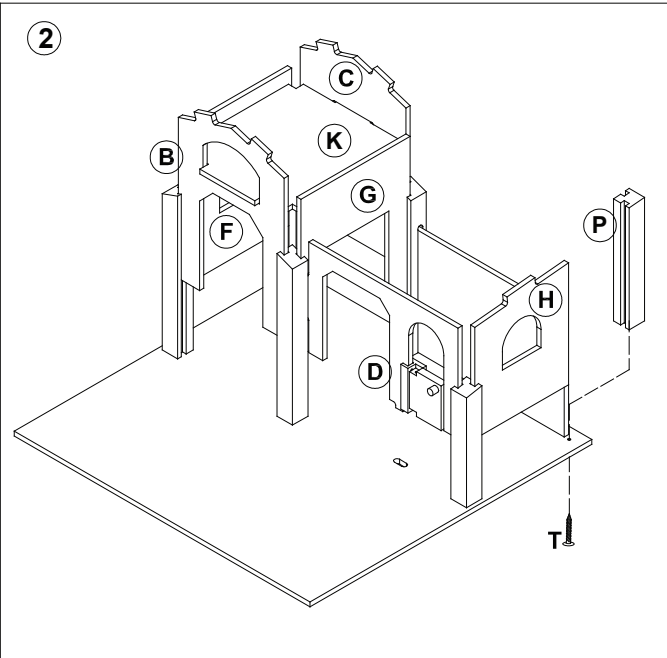 
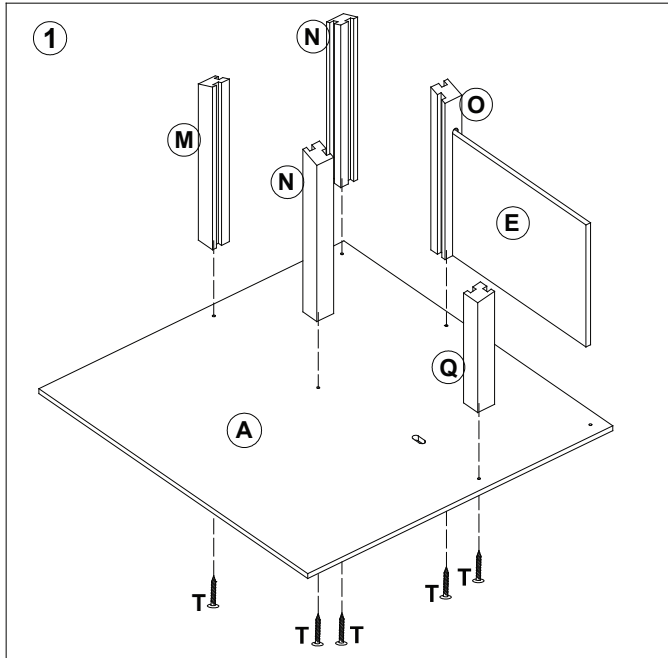 
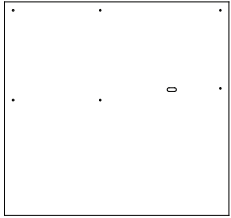 

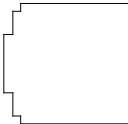 
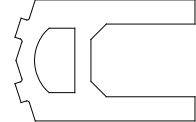 
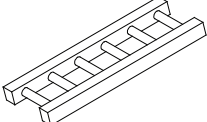 
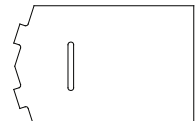 


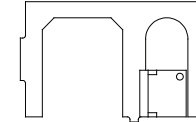 


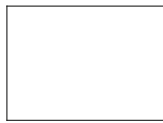 
 
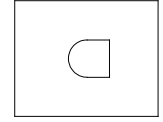 
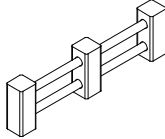 
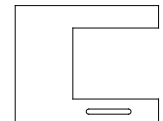 
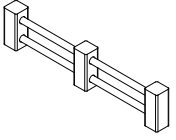 
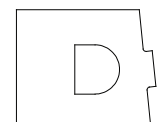 




ASSEMBLY INSTRUCTION TV411



A		x1	J		x2
			K		x1
B		x1	L		x1
C		x1	M		x1
			N		x2
D		x1	O		x1
			P		x1
E		x1	Q		x1
F		x1	R		x2
G		x1	S		x1
H		x1	T		x6
I		x1			

ADULT ASSEMBLY REQUIRED